

ОБОРУДОВАНИЕ										АКСЕССУАРЫ
Неперф. платы	Платы Lina 12,5	Платы перфорир. Lina 25	Стойки монт. Lina 25	Рейки Lina 25	Модульные шасси	Внутр. дверь	Козырек	Цоколи для Atlantic и Marina	Пластины Cabstop IP 55	
0 360 52	0 360 04	0 360 12	0 361 51	0 367 80		0 363 59 <sup>(3)</sup>				Монтажный комплект для Cabstop Кат. № 0 364 98
0 360 49 <sup>(M)</sup>	0 360 00 <sup>(A)</sup> 0 360 01 <sup>(M)</sup>	0 360 07 <sup>(A)</sup> 0 360 99 <sup>(M)</sup>	0 361 50 <sup>(A)</sup>							Комплект освети-тельный Кат. № 0 482 35
0 360 52	0 360 04	0 360 12	0 361 51	0 367 80	0 361 01	0 363 59 <sup>(3)</sup>	0 365 51 <sup>(A)</sup>		0 364 94	
0 360 55	0 360 09	0 360 15	0 361 52	0 367 81	0 361 02	0 363 60 <sup>(3)</sup>	0 365 52 <sup>(A)</sup>		0 364 95	
0 360 56	0 360 22	0 360 16	0 361 53	0 367 81		0 363 61 <sup>(3)</sup>	0 365 52		0 364 95	
0 360 55	0 360 09	0 360 15	0 361 52	0 367 81		0 363 60 <sup>(3)</sup>	0 365 53		0 364 95	
0 360 56	0 360 22	0 360 16	0 361 53	0 367 81	0 361 03	0 363 61 <sup>(3)</sup>	0 365 53 <sup>(A)</sup>		0 364 95	
0 360 58	0 360 31	0 360 18	0 361 54	0 367 82	0 361 05	0 363 62 <sup>(3)</sup>	0 365 64 <sup>(A)</sup> 0 362 93 <sup>(M)</sup>		0 364 96	Полка для схем Кат. № 0 365 80
0 360 59	0 360 33	0 360 19	0 361 55	0 367 83		0 363 63 <sup>(3)</sup>	0 365 54		0 364 97	
0 360 54	0 360 40	0 360 23	0 361 56	0 367 83			0 365 54		0 364 97	
0 360 61	0 360 42	0 360 21	0 361 56	0 367 84		0 363 64 <sup>(3)</sup>			0 364 97	
0 360 58	0 360 31	0 360 18	0 361 54	0 367 82		0 363 62 <sup>(3)</sup>			0 364 96	
0 360 59	0 360 33	0 360 19	0 361 55	0 367 83	0 361 06	0 363 63 <sup>(3)</sup>	0 365 56 <sup>(A)</sup> 0 362 94 <sup>(M)</sup>	0 363 00 <sup>(A)</sup> 0 362 91 <sup>(M)</sup>	0 364 97	Вентиляторы Кат. № 0 365 74
0 360 54	0 360 40	0 360 23	0 361 56	0 367 83			0 365 56	0 363 00	0 364 97	
0 360 61	0 360 42	0 360 21	0 361 56	0 367 84	0 361 09	0 363 64 <sup>(3)</sup>	0 365 57 <sup>(A)</sup> 0 362 95 <sup>(M)</sup>	0 363 01 <sup>(A)</sup> 0 362 92 <sup>(M)</sup>	0 364 97	
0 360 64	0 360 46	0 360 87	0 361 58	0 367 84	0 361 10	0 363 65 <sup>(3)</sup>	0 365 57 <sup>(A)</sup> 0 362 95 <sup>(M)</sup>	0 363 01 <sup>(A)</sup> 0 362 92 <sup>(M)</sup>	0 364 97	
0 360 65	0 360 47	0 360 88	0 361 58	0 367 85			0 365 61	0 363 02	2 x 0 364 96	
0 360 68	0 360 79	0 360 98	0 361 59	0 367 85			0 365 61	0 363 02	2 x 0 364 96	
0 360 59	0 360 33	0 360 19	0 361 55	0 367 83		0 363 63 <sup>(3)</sup>		0 363 40	0 364 97	
0 360 61	0 360 42	0 360 21	0 361 56	0 367 84		0 363 64 <sup>(3)</sup>	0 365 60	0 363 41	0 364 97	
0 360 64	0 360 46	0 360 87	0 361 58	0 367 84		0 363 65 <sup>(3)</sup>	0 365 60	0 363 41	0 364 97	
0 360 67	0 360 75	0 360 90	0 361 59	0 367 84			0 365 60	0 363 41	0 364 97	Напольный монтаж (стр. 313)
0 360 69	0 360 02	0 360 91	0 361 50	0 367 80						
0 360 69	0 360 02	0 360 91	0 361 50	0 367 80			0 365 51		0 364 94	
0 360 70	0 360 05	0 360 92	0 361 51	0 367 81			0 365 52		0 364 95	
0 360 71	0 360 14	0 360 93	0 361 52	0 367 82			0 365 64		0 364 96	
0 360 57	0 360 24	0 360 17	0 361 53	0 367 83			0 365 54		0 364 97	
0 360 60	0 360 34	0 360 20	0 361 55	0 367 84					0 364 97	
0 360 57	0 360 24	0 360 17	0 361 53	0 367 83			0 365 56	0 363 00	0 364 97	
0 360 60	0 360 34	0 360 20	0 361 55	0 367 84			0 365 57	0 363 01	0 364 97	
0 360 63	0 360 43	0 360 25	0 361 56	0 367 85			0 365 61	0 363 02	2 x 0 364 96	
0 360 66	0 360 48	0 360 89	0 361 58	0 367 86			0 365 63	0 363 03	2 x 0 364 97	
0 360 57	0 360 24	0 360 17	0 361 53	0 367 83				0 363 40	0 364 97	
0 360 66	0 360 48	0 360 89	0 361 58	0 367 86			0 365 62	0 363 43	2 x 0 364 97	
0 360 52	0 360 04	0 360 11	0 361 50	0 367 81			0 365 52		0 364 95	
0 360 56	0 360 22	0 360 13	0 361 51	0 367 83			0 365 54		0 364 97	
0 360 61	0 360 42	0 360 94	0 361 55	0 367 85					2 x 0 364 96	
0 360 59	0 360 33	0 360 06	0 361 53	0 367 84			0 365 57	0 363 01	0 364 97	
0 360 54	0 360 40	0 360 08	0 361 53	0 367 85			0 365 61	0 363 02	2 x 0 364 96	
0 360 61	0 360 42	0 360 94	0 361 55	0 367 85			0 365 61	0 363 02	2 x 0 364 96	
0 360 65	0 360 47	0 360 10	0 361 56	0 367 86			0 365 63	0 363 03	2 x 0 364 97	

<sup>(1)</sup> Без отверстия с металлической пластиной под кабельные вводы  
<sup>(2)</sup> 2 двери  
<sup>(3)</sup> для установки в шкафы Atlantic необходимо заказать Кат. № 0 363 69  
<sup>(A)</sup> для Atlantic  
<sup>(M)</sup> для Marina



Монтажный комплект для Cabstop Кат. № 0 364 98



Комплект освети-тельный Кат. № 0 482 35



Полка для схем Кат. № 0 365 80




Вентиляторы Кат. № 0 365 74



Напольный монтаж (стр. 313)



Замки (стр. 319)

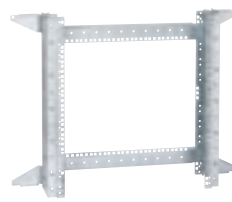

Шасси VDI 19" (стр.315)